

# FREQUENTLY ASKED QUESTIONS

ETERNITY GE/ME/LE

What  
When  
Which  
Where  
How  
Who  
Why




**Date:** 20<sup>th</sup> October, 2015

**Version:** V1R1

**Author:** Tapan Upmanyu

## How to integrate ETERNITY with COSEC?

- Consider a scenario.

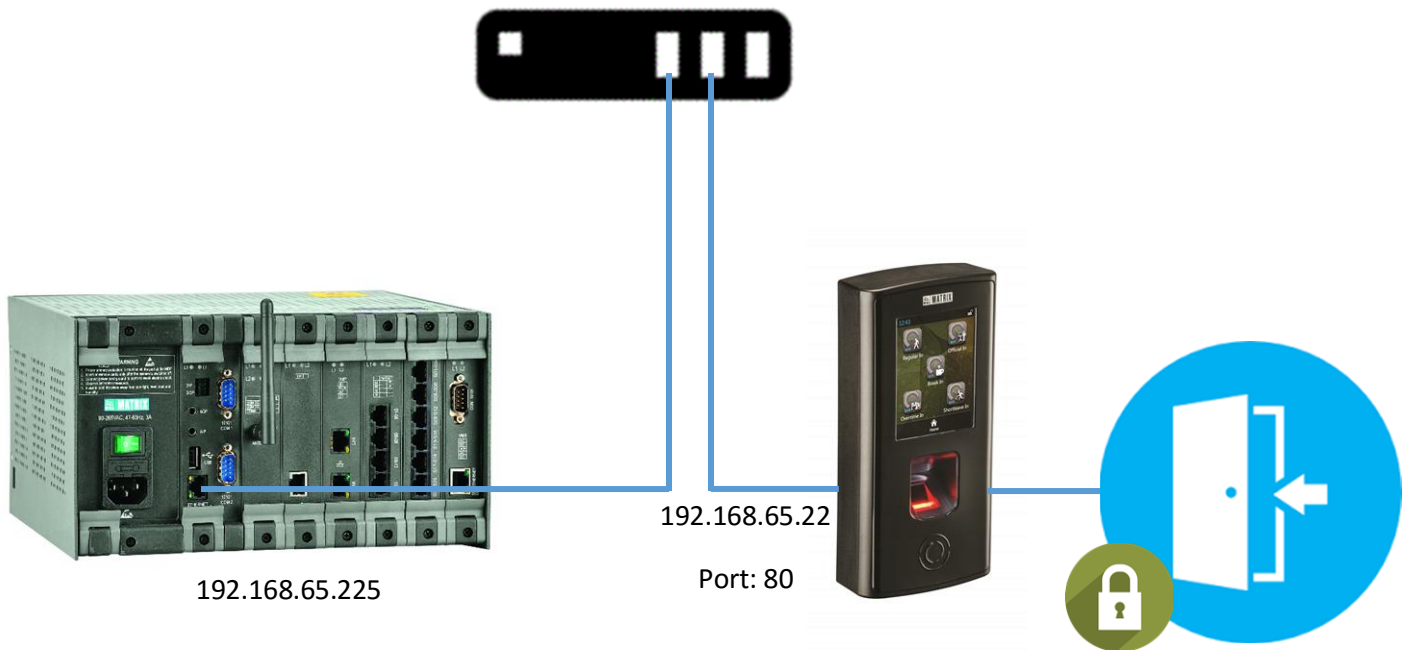

- Matrix ETERNITY and Matrix COSEC Door Controller are having IP addresses as shown above. Now we desire to unlock the door from extensions 2001, 2002 and 2003.


- Login into System Engineer Mode. Go to SLT Parameters and assign COSEC Door Group 01 to 2001, 2002 and 2003. There are 50 such groups available.

The screenshot shows the 'MATRIX ETERNITY' web interface. The left sidebar contains a navigation menu with 'SLT Configuration' highlighted. The main content area displays a table titled 'SLT Parameters' with columns: Port No., H/w Slot - Port, Access Code, Name, Station Basic Features Template, Station Advance Features Template, SLT Hardware Template, Call Pickup Group, COSEC Door Group, and Station Type. The first three rows of the table are highlighted with a red box, showing configurations for Port No. 1, 2, and 3, all with COSEC Door Group 01.


Port No.	H/w Slot - Port	Access Code	Name	Station Basic Features Template	Station Advance Features Template	SLT Hardware Template	Call Pickup Group	COSEC Door Group	Station Type
1	02 - 01	2001		01	01	02	01	01	Administration
2	02 - 02	2002		01	01	02	01	01	Administration
3	02 - 03	2003		01	01	02	01	01	Administration
4	02 - 04	2004		01	01	02	01	00	Administration
5	02 - 05	2005		01	01	02	01	00	Administration
6	02 - 06	2006		01	01	02	01	00	Administration
7	02 - 07	2007		01	01	02	01	00	Administration
8	02 - 08	2008		01	01	02	01	00	Administration
9	02 - 09	2009		01	01	02	01	00	Administration
10	02 - 10	2010		01	01	02	01	00	Administration
11	02 - 11	2011		01	01	02	01	00	Administration
12	02 - 12	2012		01	01	02	01	00	Administration
13	02 - 13	2013		01	01	02	01	00	Administration
14	02 - 14	2014		01	01	02	01	00	Administration
15	02 - 15	2015		01	01	02	01	00	Administration
16	02 - 16	2016		01	01	02	01	00	Administration

At the bottom of the interface, there are buttons for 'Submit', 'Default', 'Default One', 'Advance', 'Clear Access Code', and 'Call Traffic'.

- Go to COSEC Door Group. Enter the User name and Password of the COSEC Door and assign the IP address and port of COSEC Door to Group no. 01.

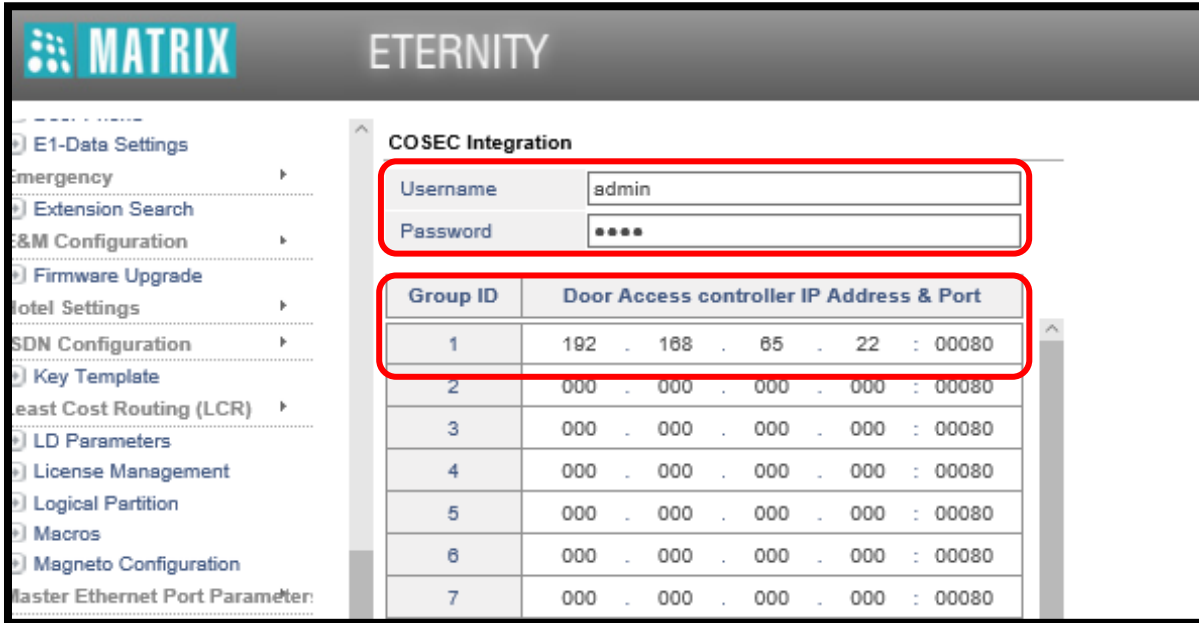

- Now we have to dial \*7(can be changed) from either of 2001, 2002 or 2003 to unlock the door.

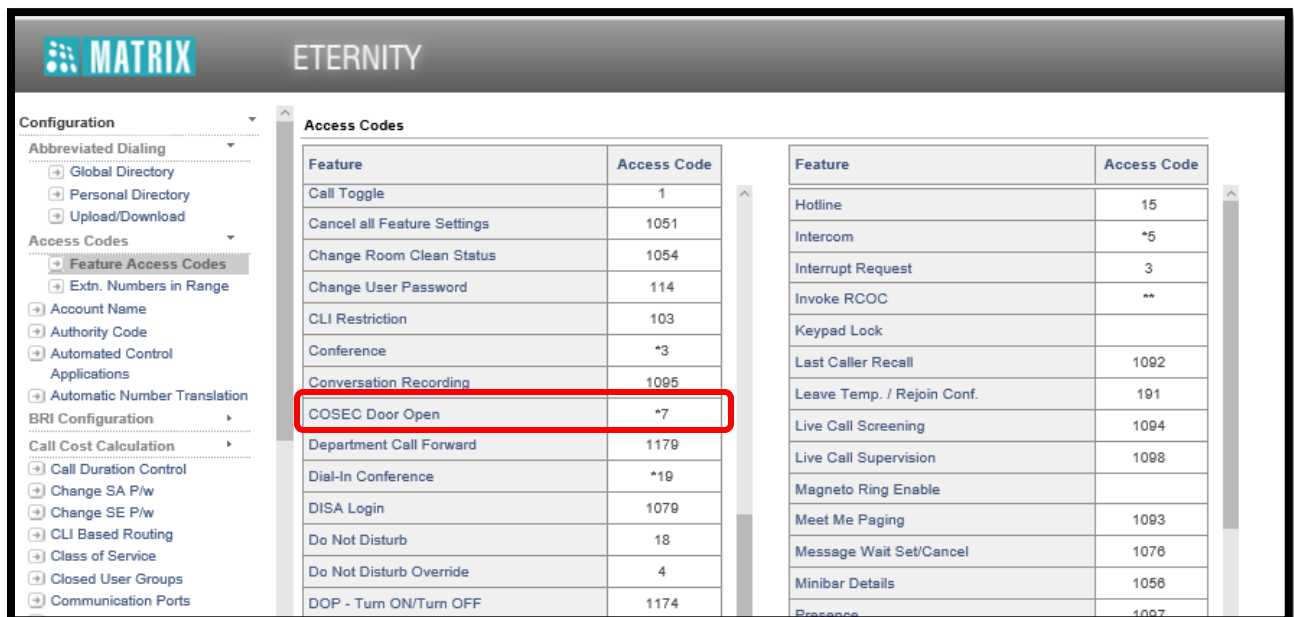

**Disclaimer:** The information contained in this e-mail and/or attachment may contain confidential or privileged information. Unauthorized use, disclosure or copying is strictly prohibited and may constitute unlawful act and can possibly attract legal action, civil and/or criminal. The contents of this message need not necessarily reflect or endorse the views of Matrix Comsec on any subject matter. Any action taken or omitted on this message is not entirely at your risk and the originator of this message nor does Matrix Comsec take any responsibility or liability towards the same. If you are not the intended recipient, please notify us immediately and permanently delete the message.